

WARNING.

Read before use.

- 1. DO NOT PULL THE HOSE OUT OF THE REEL BY JUST HOLDING THE TRIGGER SPRAY.**
- 2. USE YOUR SPARE HAND TO PULL OUT THE HOSE.**
- 3. TURN OFF THE WATER AND RELEASE PRESSURE BEFORE RETRACTING THE HOSE.**
- 4. ADJUST TRIGGER AND SPRAY BY USING THE SCREW**
- 5. RC1200 Hotwash reels require regular cleaning of the hose during return to the reel to prevent build-up of enzymes from blood, detergents, grime and the like.**
- 6. A light coating of silicone applied by a rag occasionally will also assist in extending the working life of the hose.**

FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN THE REEL NOT PERFORMING CORRECTLY OR DANAGING THE HOSE LINE.